

Quick Install Guide

Locate CD changer wiring in back of car consisting of 6 pin audio and 3 pin data connection.


The 3 pin CD changer data connector has brown, red/green and white/yellow wires **in THAT SPECIFIC order.**

Install module on the CD changer data connection with silver side towards brown wire as shown.

Caution: Do not install if your wiring is a different order or color - it will damage the module.
Contact us first!



We are now using 4 pin connectors for the back of the head unit. Install Aux Cable on back of stereo head unit with silver side up as pictured after removing CD changer connection.

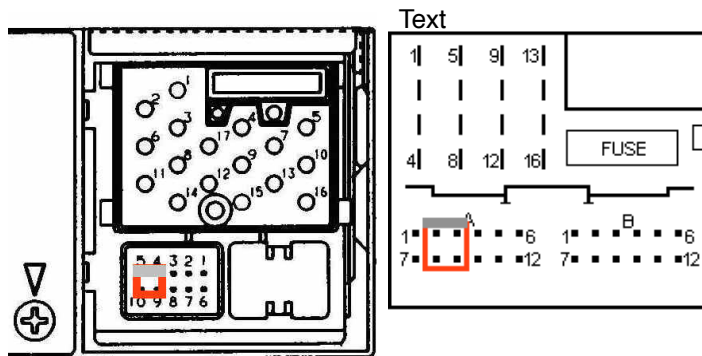

For more detailed version including video, please visit quidzel.com/#tabs1-manuals